

Concelo.
entro


FRONT PANEL TEMPLATE

TO SUIT BLUM MERIVOBX

PLEASE WATCH
INSTALLATION VIDEO FIRST



SCAN ME

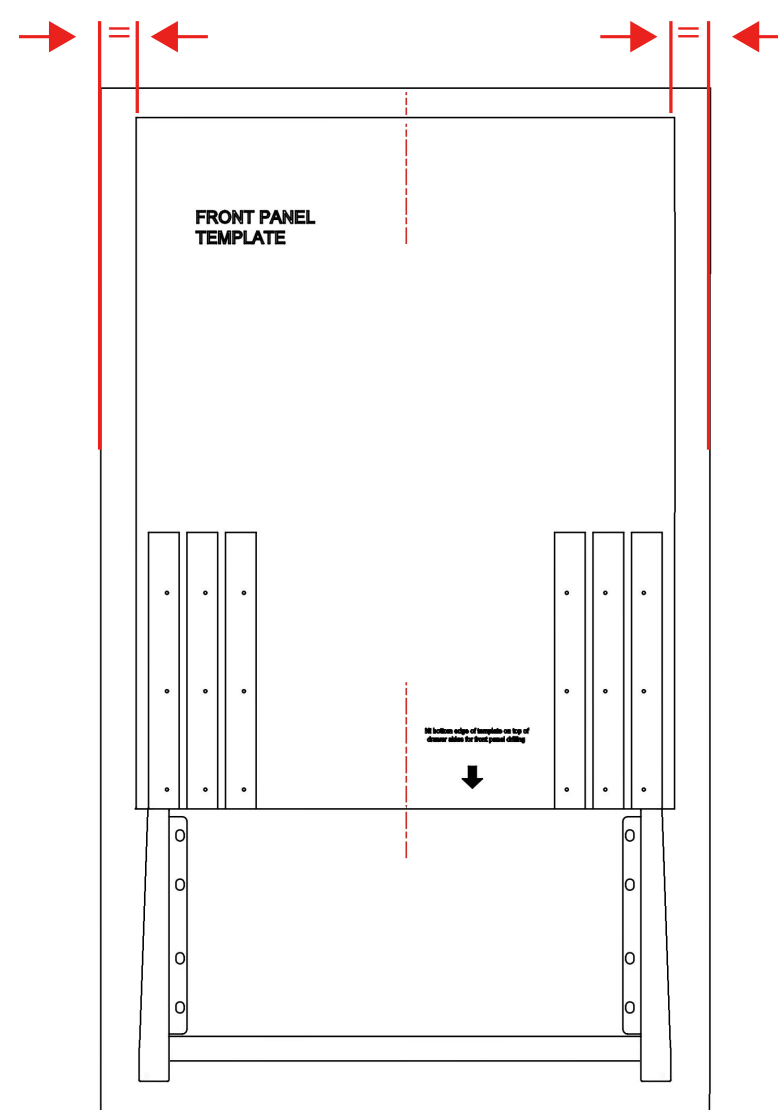

DOOR CENTRE

CE-450

CE-400

CE-350

CE-350

CE-400

CE-450

Sit bottom edge of template on top of
drawer sides for front panel drilling.

TOP HOLE HEIGHT
2X16L & 2X20L
MODELS

DRILL: Ø2 X 5mm deep

TOP HOLE HEIGHT
2X13L & 2X15L
MODELS

Sit bottom edge of template on top of
drawer sides for front panel drilling.

COMMON BOTTOM
HOLE HEIGHT

L



R



CE-350-216 [BM]
CE-400-220 [BM]
CE-450-220 [BM]

L



R



CABINET TEMPLATE

TO SUIT BLUM MERIVOBX

L



R



CE-350-213 [BM]
CE-400-215 [BM]
CE-450-215 [BM]

L



R




↑ DRILL: Ø5 X 13mm deep

CABINET FRONT LEFT



Align to front edge of
left hand cabinet side

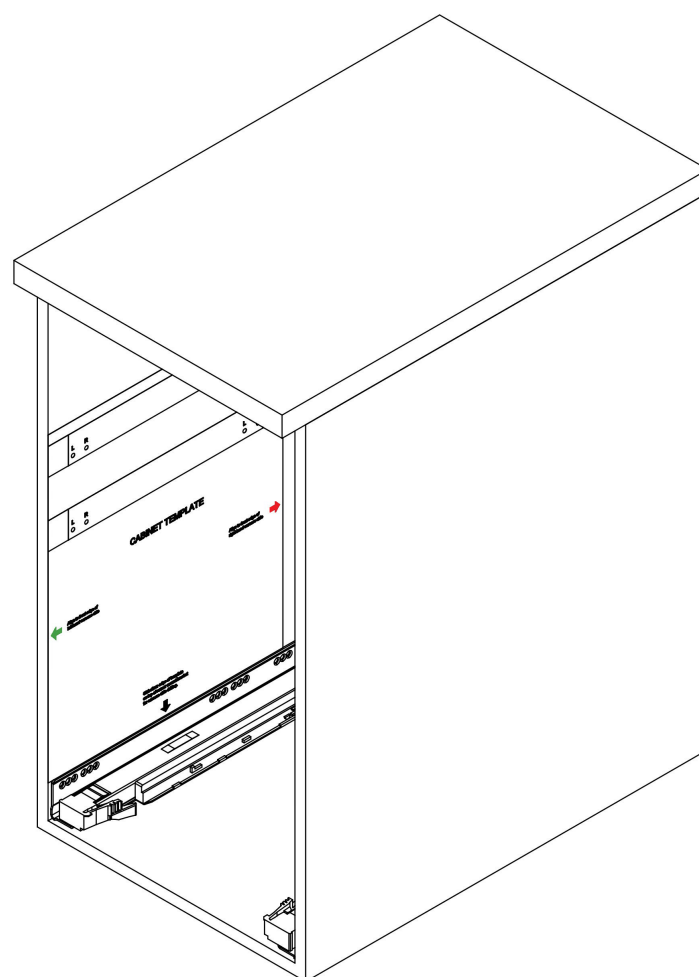

CABINET FRONT RIGHT

Align to front edge of
right hand cabinet side



Sit bottom edge of template
on top of runner mount bracket
for cabinet side drilling.

