

The Hideaway deluxe



Installation Instructions

Trade – Please leave instructions and the Glad Sample Pack inside the bin bucket for owner.

Unpack Unit

- Remove all polystyrene.

Remove Tracks (see fig.1)

- Fully extend tracks, find both black lugs (one on each outer side of track).
- Push left lug up and right lug down, pulling the track towards you until it separates from the unit.

Remove Lid and Foam (with unit upside down – tracks facing up see fig. 2)

- Push down on rear end of lid clearing metal hooks, and slide back simultaneously to clear unit.
- Remove foam from unit, leaving the plastic cover on.

Body / Main Frame

- Position frame inside cupboard carcass. For TOP mounted bins position frame and secure with 20mm surefix screws. For FLOOR mounted bins, screw base brackets onto side of main frame, then secure the floor unit to the base of the carcass with 20mm surefix screws.
- Remove perfume sachet from plastic covering and replace in the same position flat.

Re-Install Lid and Foam

- Replace foam so it is sitting in-between the main frame and lid.
- Slide lid underneath foam, while pushing up on the rear end and aligning with metal hooks.
- Ensure the front of the lid is resting on metal support, this ensures (slight up and down) movement confirming correct installation.

Fit Door to Unit Door Bracket (door models only)

- Screw a 4mm self tapping screw into the centre hole, until the point of the screw is protruding approx 3mm.
- Align door front correctly against the door of cupboard, then tighten centre screw.
- Check positioning; proceed to marking and screwing the four remaining screws.

Re-Attach the Tracks

- Ensure the tracks attached to the main frame are pushed all the way inside cupboard. Ensure the inner slider is pulled all the way forward.
- Line up the tracks on door to those on the main frame.
- Push tracks in all the way; pull out again to ensure correct positioning. Tracks should slide with ease.

Installation information for models KK2H, KK3H, KK4H, KK12H, KK7H: If hinges are used that do not allow the door to clear the opening fully, allow an extra 10mm width. Installation also requires that the top door hinge be 150mm from the top of the door to allow clearance for the bin handle.

FIGURE 1 – TRACK REMOVAL (LEFT SIDE)


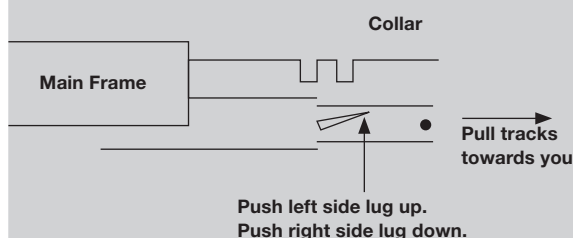


FIGURE 2 – REMOVAL OF FRICTION FITTED LID



To remove lid – Push Up on rear end of lid clearing metal hooks, and slide back simultaneously to clear unit.

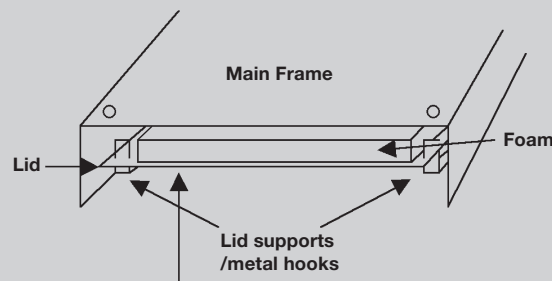

Questions

New Zealand: Phone: (09) 426-7456 **Email:** info@hideawaybins.co.nz **Web:** www.hideawaybins.co.nz

Australia: Freephone: 1800 042 642 **Email:** info@hideawaybins.co.nz **Web:** www.hideawaybins.com.au